


Content shifted towards closing.

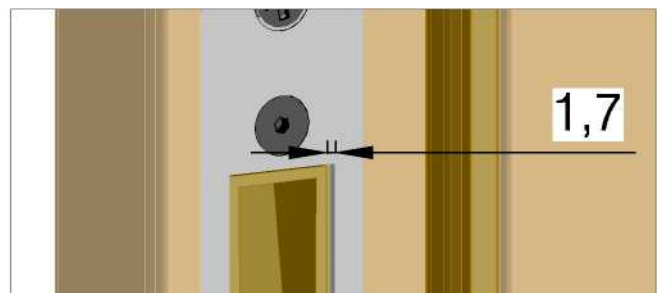

Content shifted towards opening.

Adjusting the lock plate of the magnetic lock

1. Using a 2.5mm hex key, loosen the fastening screws (1) half to three-quarters of a turn
2. Move the contents of the lock plate (2) with your hand, as needed, either in the direction of opening or closing of the door leaf.
3. Tighten the fastening screws again.
The maximum adjustment range is 1.7-2.0 mm.